


MODEL FS3820

SPOTNAILS®
DIVISION OF PEACE INDUSTRIES, LTD.

1100 Hicks Rd.
Rolling Meadows, IL 60008
Phone: 847-259-1620

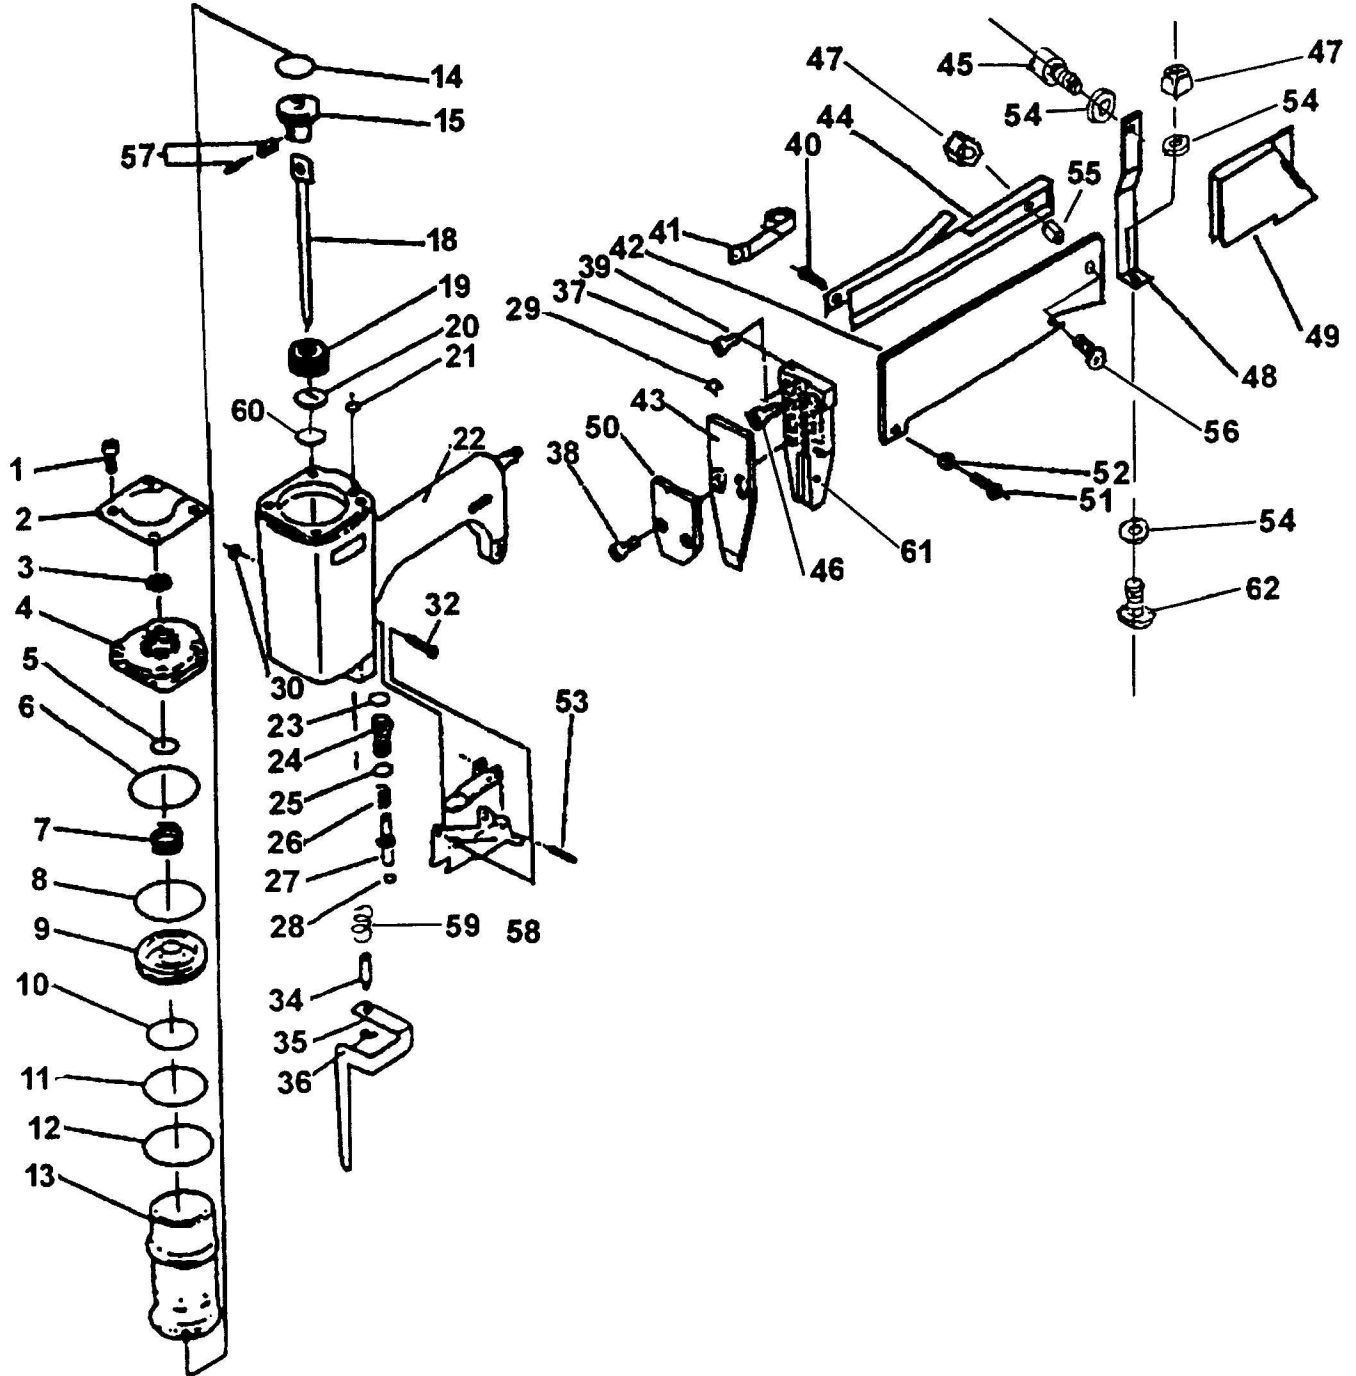

SPOTNAILS MODEL FS3820

Ref No.	Part No.	Description
1	P-24300	Screw
2	P-70032	Exhaust Cover
◆	3	P-15120 Exhaust Seal
◆	4	P-60135 Body Cap
◆	5	P-64230 Poppet O-Ring
◆	6	P-64231 Cap O-Ring
◆	7	P-18226 Spring
◆	8	P-64232 Poppet O-Ring
◆	9	P-63030 Poppet Valve
◆	10	P-64233 Piston Stop O-Ring
◆	11	P-64234 Cylinder Seal O-Ring
◆	12	P-64242 Cylinder O-Ring
◆	13	P-05071 Cylinder
◆	14	P-64243 Piston O-Ring
◆	15	P-66088 Piston
◆	18	P-06212 Driver Blade
◆	19	P-15123 Bumper
◆	20	P-15124 Return Seal
◆	21	P-64237 Pipe O-Ring
◆	22	P-01242 Body
◆	23	P-64239 O-Ring
◆	24	P-22114 Bleeder Valve
◆	25	P-64241 Bleeder Valve O-Ring
◆	26	P-18227 Valve Spring
◆	27	P-22113 Plunger
◆	28	P-64240 Plunger O-Ring
◆	29	P-18233 Spring Clip
◆	30	P-32143 E-Ring
◆	32	P-07234 Trigger Pin

Ref No.	Part No.	Description
◆	34	P-07238 Safety Yoke Pin
◆	35	P-53118 Safety Yoke
◆	36	P-32143 E-Ring
◆	37	P-24307 Screw
◆	38	P-24308 Screw
◆	39	P-08440 Wear Plate
◆	40	P-24309 Screw
◆	41	P-18232 Negator Spring
◆	42	P-12352 Track
◆	43	P-10265 Front Plate
◆	44	P-12353 Track Cover
◆	45	P-24306 Screw
◆	46	P-24342 Screw
◆	47	P-26124 Nut
◆	48	P-13046 Bracket
◆	49	P-09158 Pusher
◆	50	P-52034 Safety Yoke Guide
◆	51	P-24311 Screw
◆	52	P-26125 Nut
◆	53	P-07239 Spring Pin
◆	54	P-32144 Washer
◆	55	P-03053 Spacer
◆	56	P-24319 Screw
◆	57	AS-07001 Piston Pin Assembly
◆	58	AS-21006 Trigger Assembly
◆	59	P-18228 Safety Yoke Spring
◆	60	P-15157 Driver Blade Seal
◆	61	P-07290 Roll Pin
◆	62	P-24310 Screw

◆ Parts Included in AS-97268 O-Ring & Seal Kit