


MODEL WB1650

THIS TOOL EQUIPPED WITH
A RESTRICTIVE TRIGGER

SPOTNAILS®
DIVISION OF PEACE INDUSTRIES, LTD.
1100 Hicks Rd
Rolling Meadows, IL 60008
Phone : 847-259-1620

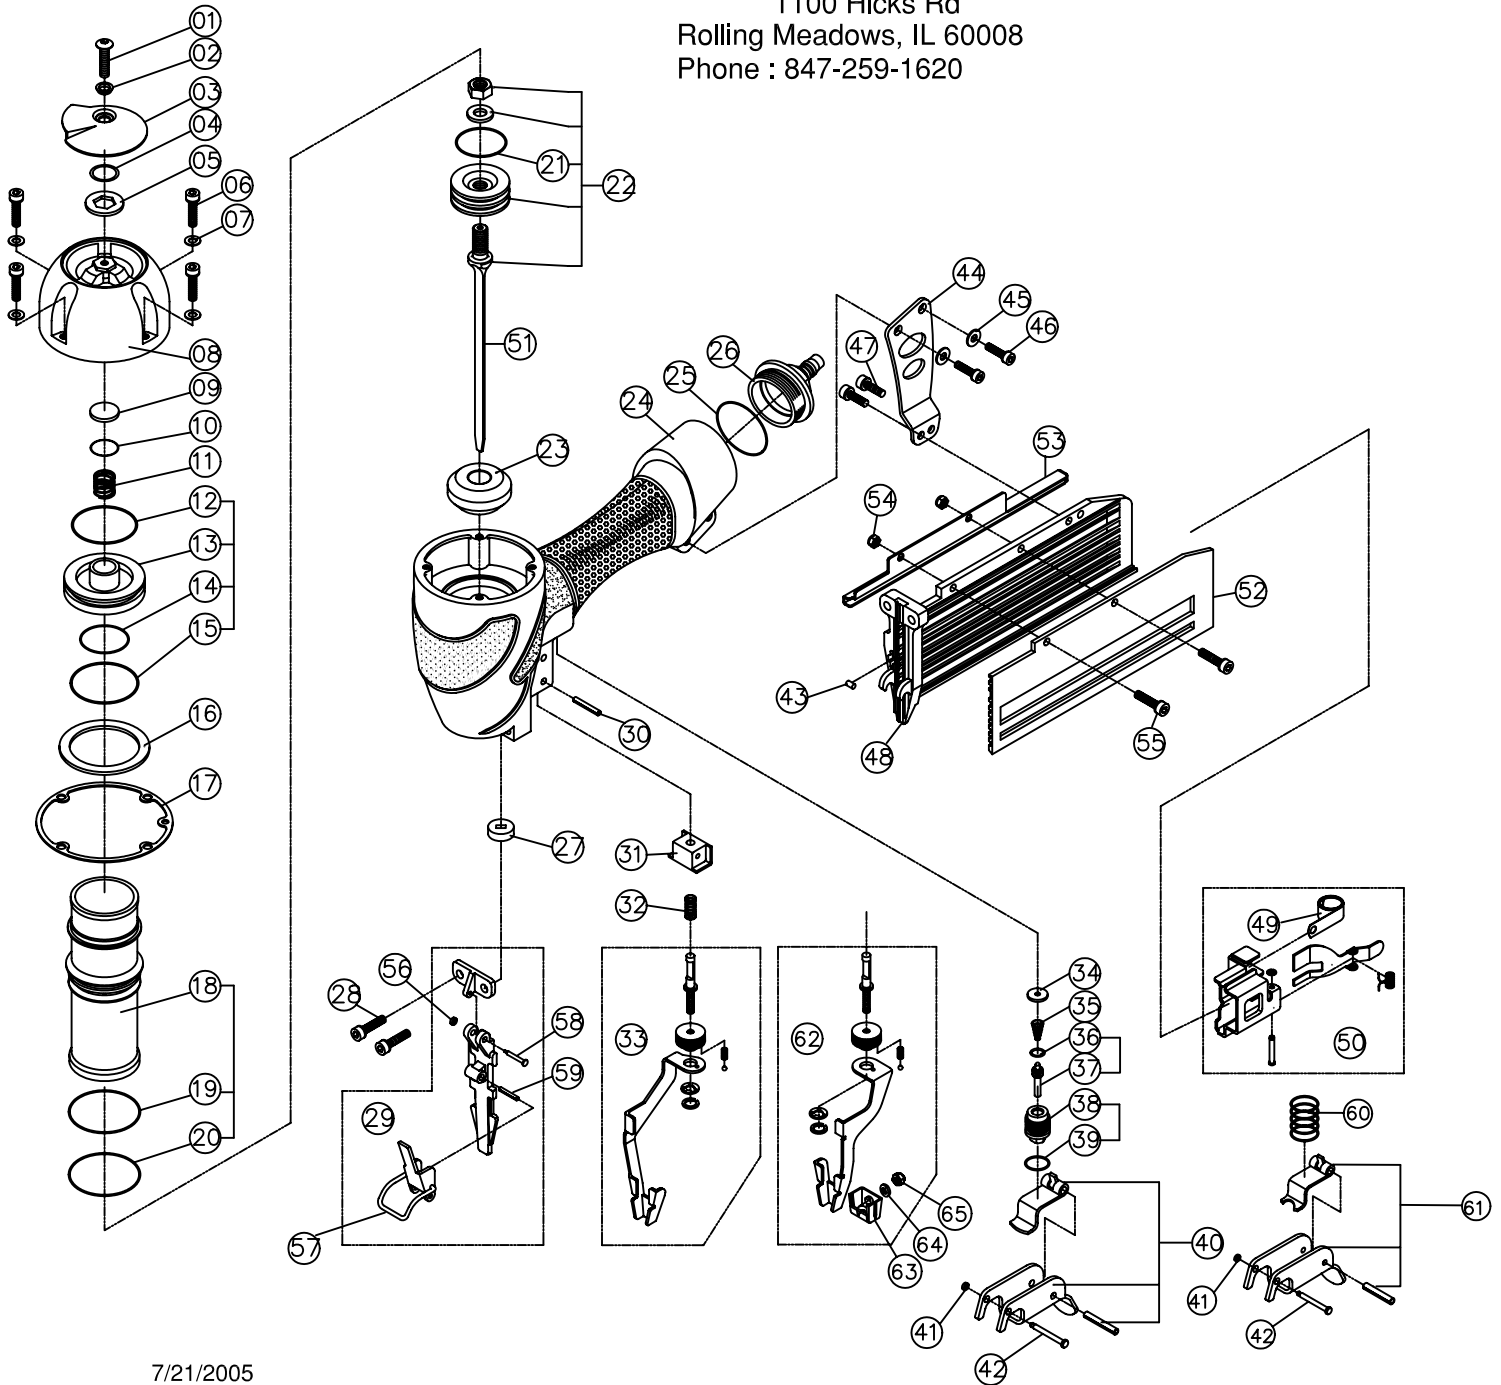

7/21/2005

SPOTNAILS MODEL WB1650

Ref. No.	Part No.	Description
1	P-24370	Screw
2	P-96118	Bushing
3	P-70042	Exhaust Deflector
4	P-64377	O-Ring
5	P-32217	Washer
6	P-24300	Cap Screw
7	P-32211	Flat Washer
8	P-60174	Cap
◆	9	P-15193 Exhaust Seal
◆	10	P-64384 O-Ring
◆	11	P-18331 Poppet Spring
◆	12	P-64385 Poppet O-Ring
◆	13	P-63038 Poppet
◆	14	P-64233 Piston Stop O-Ring
◆	15	P-64386 Cylinder Seal O-Ring
◆	16	P-03070 Guide Spacer
◆	17	P-62071 Gasket
◆	18	P-05097 Cylinder
◆	19	P-64387 Cylinder Seal O-Ring
◆	20	P-64242 O-Ring
◆	21	P-64388 Piston O-Ring
◆	22	AS-06036 Piston & Driver Assembly
◆	23	P-15195 Bumper
◆	24	P-01261 Body
◆	25	P-64389 O-Ring
◆	26	P-60175 End Cap
◆	27	P-15196 Return Seal
◆	28	P-24358 Screw
◆	29	AS-10044 Front Plate Assembly
◆	30	P-07291 Pin
◆	31	P-53165 Safety Guide
◆	32	P-18328 Spring
◆	33	AS-53043 Safety

Ref. No.	Part No.	Description
34	P-15194	Valve Seal
35	P-18283	Spring
36	P-64390	O-Ring
37	P-22165	Plunger
38	P-22166	Valve Housing
◆	39	P-64391 O-Ring
◆	40	AS-21008 Trigger Assembly
◆	41	P-64240 O-Ring
◆	42	P-07327 Trigger Pin
◆	43	P-07329 Retainer Pin
◆	44	P-13068 Bracket
◆	45	P-32144 Washer
◆	46	P-24306 Screw
◆	47	P-24313 Screw
◆	48	AS-12157 Magazine Assembly
◆	49	P-18234 Negator Spring
◆	50	AS-09039 Pusher Assembly
◆	51	P-06227 Driver
◆	52	P-12422 Magazine Cover
◆	53	P-12423 Feeder Cover
◆	54	P-26126 Nut
◆	55	P-24312 Screw
◆	56	P-64434 O-Ring
◆	57	AS-04035 Latch Assembly
◆	58	P-07356 Step Pin
◆	59	P-07352 Roll Pin
◆	60	P-18267 Spring
◆	61	AS-21019 Restrictive Trigger
◆	62	AS-53066 No Mar Tip Assembly
◆	63	P-96129 No Mar Tip
◆	64	P-32227 Washer
◆	65	P-26165 Nut

◆ Parts Included in AS-97281 O-Ring and Seal Kit