

MODEL XBFN64


SPOTNAILS®

DIVISION OF PEACE INDUSTRIES, LTD.

1100 Hicks Rd

Rolling Meadows, IL 60008

Phone : 847-259-1620

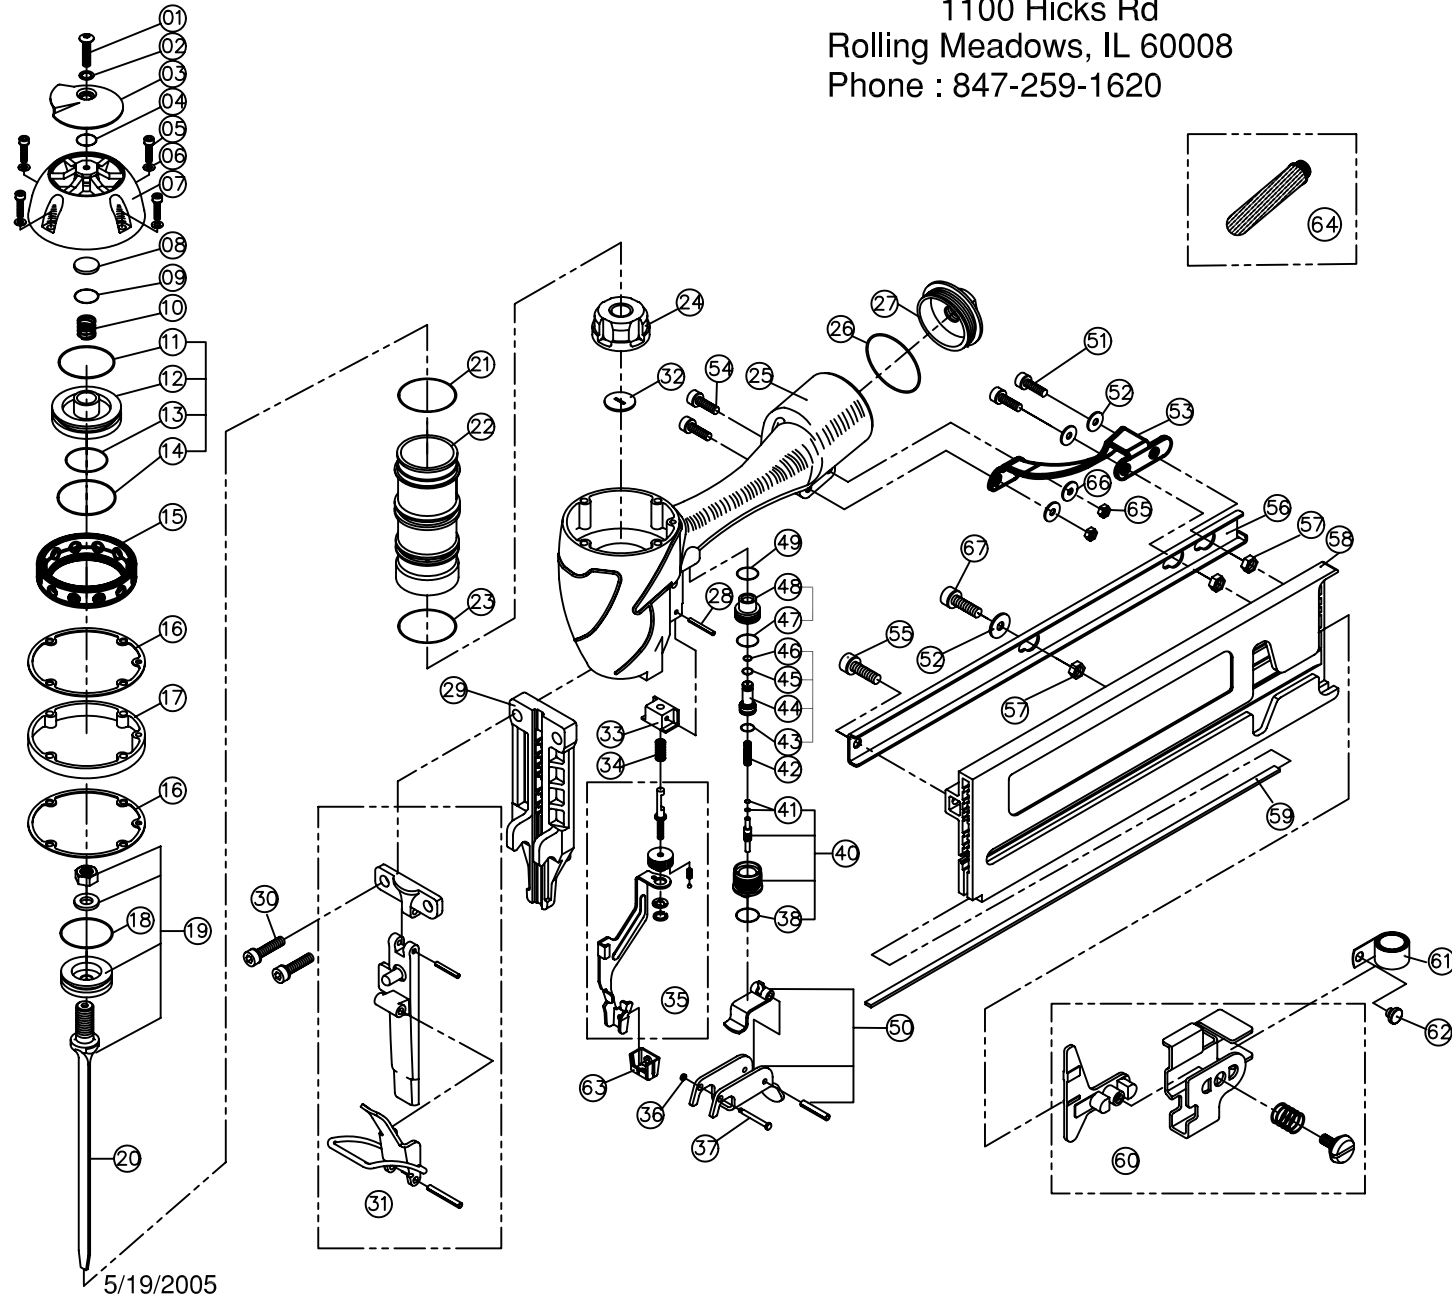

SPOTNAILS MODEL XBFN64

Ref No.	Part No.	Description		Ref No.	Part No.	Description	
1	P-24370	Screw		34	P-18328	Spring	
2	P-96118	Bushing		35	AS-53052	Safety Assembly	
3	P-70041	Exhaust Deflector	◆	36	P-64240	O-Ring	
4	P-64377	O-Ring		37	P-07327	Trigger Pin	
5	P-24456	Cap Screw	◆	38	P-64328	O-Ring	
6	P-32211	Flat Washer		40	AS-22037	Plunger Assembly	
7	P-60172	Cap Screw	◆	41	P-64383	Plunger O-Rings	
8	P-15187	Exhaust Seal		42	P-18227	Spring	
◆	9	P-64378	O-Ring	◆	43	P-64336	O-Ring
	10	P-18327	Poppet Spring		44	P-22145	Pilot Valve
◆	11	P-64028	Poppet O-Ring	◆	45	P-64335	O-Ring
	12	P-63037	Poppet	◆	46	P-64334	O-Ring
◆	13	P-64379	Piston Stop O-Ring	◆	47	P-64333	O-Ring
◆	14	P-64380	Cylinder Seal O-Ring		48	P-22144	Trigger Valve Cap
	15	P-03079	Guide Spacer	◆	49	P-64332	Valve Housing O-Ring
◆	16	P-62070	Gasket		50	AS-21008	Trigger Assembly
	17	P-03073	Body Spacer		51	P-24444	Screw
◆	18	P-64228	Piston O-Ring		52	P-32225	Washer
	19	AS-06042	Piston & Driver Assembly		53	P-13077	Bracket
	20	P-06230	Driver Blade		54	P-24445	Screw
◆	21	P-64330	Cylinder O-Ring		55	P-24446	Screw
	22	P-05096	Cylinder		56	P-12412	Magazine Cover
◆	23	P-64419	O-Ring		57	P-26162	Nut
	24	P-15188	Bumper		58	P-12431	Magazine
	25	P-01265	Body		59	P-27181	Wear Insert
	26	P-64312	O-Ring		60	AS-09050	Pusher Assembly
	27	P-60156	End Cap		61	P-18478	Negator Spring
	28	P-07262	Pin		62	P-18338	Spring Retainer
	29	P-08478	Wear Plate		63	P-96122	No-Mar Tip
	30	P-24300	Screw		64	P-97454	Filter (Optional)
	31	AS-10047	Front Plate Assembly		65	P-26126	Nut
◆	32	P-15201	Return Seal		66	P-32170	Washer
	33	P-53165	Safety Guide		67	P-24447	Screw

◆ Parts Included in AS-97286 O-Ring and Seal Kit